


# BABY LOCK SEWING ACCESSORIES

## Walking Foot

(BLG-WF)

### Instructions

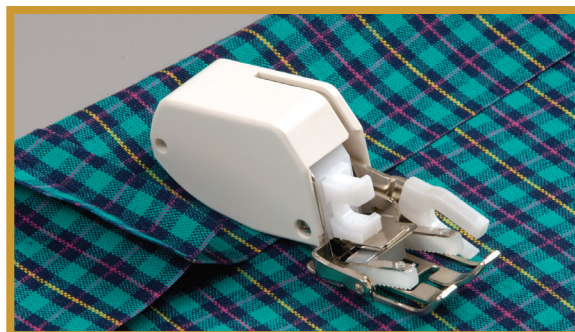

#### MACHINE SETTINGS

Stitch:	The walking foot is best used with straight or zigzag stitch patterns. Only select patterns that continually feed forward. Reverse stitches should not be sewn with the walking foot.
---------	---

The Baby Lock Walking Foot might also be known as a dual feed or even feed foot. The walking foot has a top set of feed dogs that will help feed the top layer of fabric while the machine feed dogs feed the lower layer of fabric. This foot works best with a straight stitch; however, it can be used with other forward feeding stitches. The walking foot is a great help when sewing fabrics that stretch or have a tendency to creep or slip like velvet, corduroy, or multiple layers of fabric that are layered with batting.

Use your Baby Lock Walking Foot to attach bias tape and quilt binding to eliminate buckling and rippling when turning curves.

Afraid to sew plaid fabrics because of the pinning and basting that needs to be done before you sew? Use the walking foot to help evenly feed both the top and bottom layers.

**Note:** When sewing with the walking foot, sew at medium to low speeds.

#### Attaching the Walking Foot:

Raise the needle.


Raise the presser foot lever.

Press the black button on the presser foot holder and remove the presser foot. Loosen the presser foot holder screw to remove the presser foot holder.

Set the operation lever of the walking foot so that the needle clamp screw is set between the fork, and position the walking foot on the presser foot bar.

Lower the presser foot lever.

Insert the presser foot holder screw, and tighten the screw securely using the screwdriver.

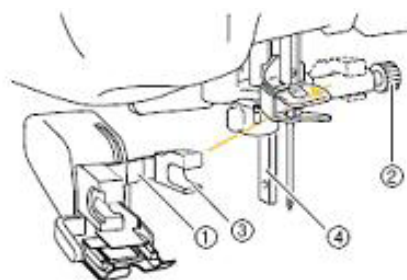

1. Operation lever
2. Needle clamp screw
3. Fork
4. Presser foot bar



**FOR THE LOVE OF SEWING**