BABY LOCK SEWING ACCESSORIES

Stylus

(BLJ18-ST)


Instructions

This attachment allows you to maneuver through grooves and easily follow the quilt pattern boards used with the Jewel longarm machine. Requires the Adaptor Plate and Stylus Holder (BLJ18-SA).



Installing the Stylus


1. The stylus is mounted into the stylus holder and secured with the thumb screw which faces the front of the machine (Photo 1).

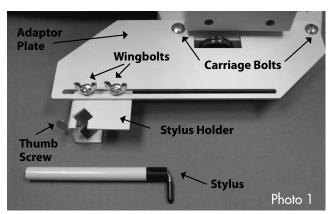

- 2. The height of the stylus is set once the pattern board is set onto the table.
- 3. With the thumb screw loosened slightly, lower the stylus so the stylus tip will go into and stay in the groove as the machine is moved (Photo 2).



Photo 2

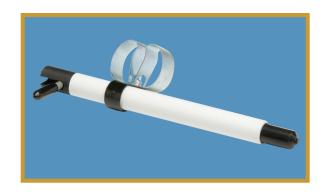

- 4. Tighten the thumb screw.
- 5. If the stylus is set too high, it can inadvertently come out of the groove while quilting. If set too low, it will cause unwanted resistance during quilting and will wear the stylus tip prematurely.

Note: The stylus tip will eventually wear down with heavy usage and it is recommended that you check the tip and replace the stylus when needed.



FOR THE LOVE OF SEWING

Using the Laser Light Clip

With the stylus adaptor plate and stylus holder unit attached to the machine, the laser light is ineffective in the lower post location since the beam can be blocked by the adaptor plate. The laser light clip has been included to allow the laser light to be used in a lower location without having to remove the adaptor from the machine (Photo 3).

- 1. Raise the stylus up and secure it so it will not drag along the
- 2. Slide the ring of the laser light clip onto the stylus.
- 3. Remove the laser light from the post and holder and place the laser light into the silver clip.
- 4. The clip can pivot to allow for positioning and alignment of the beam with your pattern (Photo 4).



Photo 3



Photo 4

