

# BABY LOCK

## SEWING ACCESSORIES

### LED Cluster Light

(BLJ18-L)

### Instructions

Conveniently add additional or replace the LED Cluster Lights that illuminate the work area surrounding the needle.



#### INSTRUCTIONS:

**IMPORTANT NOTE: Turn off the electrical power to your machine.**

#### To Replace a Light:

1. Grasp the LED Cluster Light by the base of the cluster with your fingertips.

**NOTE:** Do not grasp the LEDs themselves, as they may break.

2. Pull straight downward without twisting (slight rocking back and forth may be required).
3. If you are unable to remove the lights with your fingers, you may use an extraction tool or a pair of needle-nose pliers to carefully grasp the base of the light cluster and pull downward.

#### Installation:

1. Insert the new LED Cluster Light, matching the three pins with the three holes in the receptacle (orientation is not critical).
2. Press firmly until the LED Cluster Light is fully inserted (the base will be against the metal closing plate of the handle).

**baby lock**

**FOR THE LOVE OF SEWING**