

BABY LOCK SEWING ACCESSORIES

Straight Stitch Foot

(BLG-SS)


Instructions


If you want to reduce puckering on lightweight fabrics and prevent delicate fabrics from “jumping” and shifting, this foot is for you. The small opening on the foot provides support as the needle travels through the fabric, preventing flagging.

INSTRUCTIONS:


The straight stitch needle plate and the straight stitch foot can only be used for straight stitches (middle needle position stitches). Use the straight stitch needle plate and the straight stitch foot when sewing thin fabrics or when sewing small pieces which tend to sink into the hole of the regular needle plate during sewing. The straight stitch foot is perfect to reduce puckering on lightweight fabrics. The small opening on the foot provides support for the fabric as the needle travels through the fabric.

Note: Always use the straight stitch foot in combination with the straight stitch needle plate.

1. Press the “Needle Position” button to raise the needle and turn the main power to OFF or press  .
2. Remove the needle and the presser foot holder.
3. Remove the flat bed attachment or the embroidery unit if either are attached.

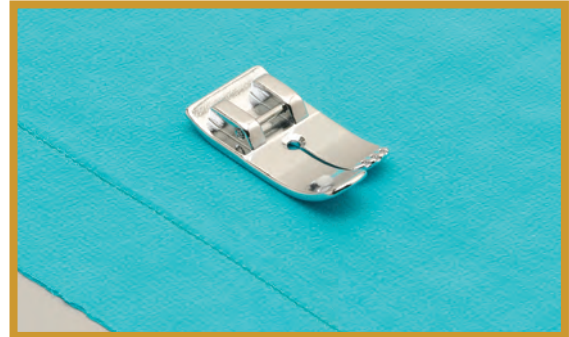


4. Grasp both sides of the needle plate cover and slide it toward you.

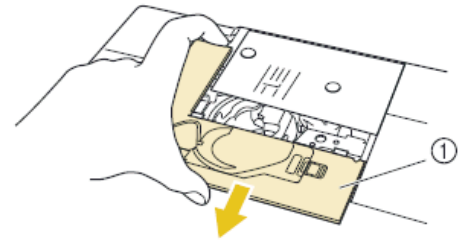

① Needle plate cover

5. Grasp the bobbin case and then pull it out.

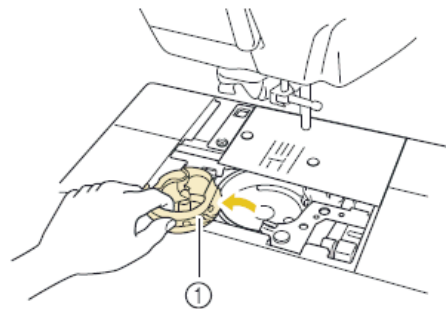


① Bobbin case




FOR THE LOVE OF SEWING

6. Use the disc-shaped screw driver included with the machine to unscrew and remove the regular needle plate.

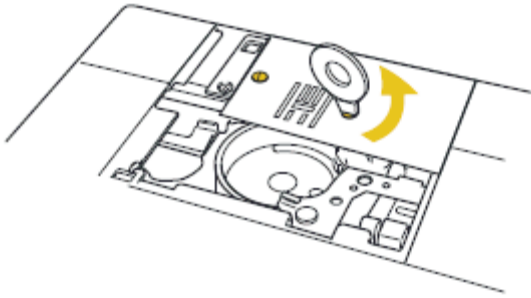

7. Set the straight stitch needle plate in place and use the disc-shaped screw driver to tighten the plate.

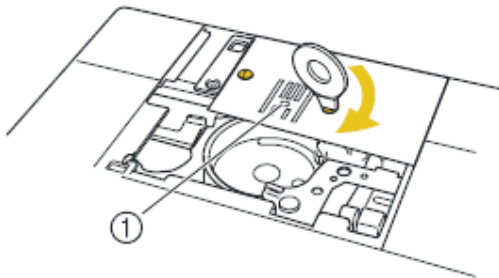


① Round hole

8. Align the two screw holes on the needle plate with the two holes on the machine. Use the disc-shaped screw driver included with the machine to secure the screws in the needle plate.
9. Insert the bobbin case in its original position and then attach the needle plate cover.
10. After reinstalling the needle plate cover, select any of the straight stitches. When using the straight stitch needle plate, all straight stitches become middle needle position stitches. You cannot change the needle position using the width display.

Note: Always secure the needle plate before inserting the bobbin case into its original position.

11. Insert needle and attach the straight stitch foot.

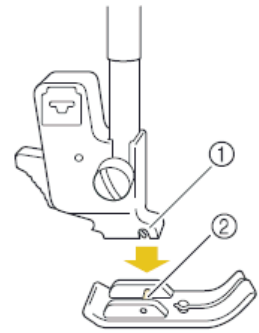

- ① Notch
② Pin

12. Start sewing. After sewing, make sure to remove the straight stitch needle plate and the straight stitch foot and reinstall the regular needle plate, the needle plate cover and the presser foot "J".

Note: To prevent puckering on fine fabrics, use a fine needle, size 75/11 and a short stitch length. For heavier fabrics, use a heavier needle, size 90/14 and longer stitches.



FOR THE LOVE OF SEWING

800-422-2952

www.babylock.com